

METROLOGIC INSTRUMENTS, INC. MS7120 Orbit[®] Presentation Laser Scanner Installation and User's Guide



LOCATIONS

CORPORA	TE HEADQUARTERS						
North Am	nerica	Metrologic Instruments, Inc. 90 Coles Road Blackwood, NJ 08012-4683	Customer Service: 1-800-ID-METRO Tel: 856-228-8010 Fax: 856-228-6673 Email: info@metrologic.com Internet: www.metrologic.com				
EUROPEA	N HEADQUARTERS						
Germany Middle Ea	, ast and Africa	Metrologic Instruments GmbH Dornierstrasse 2 82178 Puchheim b. Munich, Germany	Tel: +49 89 89019 0 Fax: +49 89 89019 200 Email: info@europe.metrologic.com Germany Email: info@de.metrologic.com				
	Spain	Metrologic Eria Ibérica SL Julián Camarillo 29, D-1 Edificio Diapasón 28037 Madrid	Tel: +34 913 272 400 Fax: +34 913 273 829 Email: info@es.metrologic.com				
	Italy	Metrologic Instruments Italia srl Via Emilia 70 40064 Ozzano dell'Emilia (BO)	Tel: +39 0 51 6511978 Fax: +39 0 51 6521337 Email: info@it.metrologic.com				
	France	Metrologic Eria France SA 69 Rue de la Belle Etoile ZI Paris Nord II, BP 50057 95947 – ROISSY CDG CEDEX	Tel: +33 (0) 1 48.63.78.78 Fax: +33 (0) 1 48.63.24.94 Email: info@fr.metrologic.com				
ASIA	United Kingdom	Metrologic Instruments UK Limited 58 Tempus Business Centre Kingsclere Road, Basingstoke Hampshire RG21 6XG	Tel: +44 (0) 1256 365900 Fax: +44 (0) 1256 365955 Email: info@uk.metrologic.com				
	Singapore	Metrologic Asia (Pte) Ltd No. 8 Kaki Bukit Place 4 th Floor Singapore 416186	Tel: 65-6842-7155 Fax: 65-6842-7166 Email: info@sg.metrologic.com				
	China	Metro (Suzhou) Technologies Co., Ltd. 221 Xing Hai Street Suzhou Industrial Park Suzhou, China 215021	Tel: 86-512-62572511 Fax: 86-512-62571517 Email: info@cn.metrologic.com				
	Japan	Metrologic Japan Co., Ltd. Matsunoya Building, 6 Floor 3-14-8 Higashiueno Taitou-Ku, Tokyo 110-0015 Japan	Tel: 81-03-3839-8511 Fax: 81-03-3839-8519 Email: info@jp.metrologic.com				
SOUTH A	MERICA						
	Brazil	Metrologic do Brasil Ltda. Rua da Paz 2059 CEP 04713-002 Chácara Santo Antônio São Paulo, SP, Brasil	Tel: 55-11-5182-8226 Fax: 55-11-5182-8315 Email: info@br.metrologic.com				
	Outside Brazil	Metrologic South America Rua da Paz 2059 CEP 04713-002 Chácara Santo Antônio São Paulo, SP, Brasil	Tel: 55-11-5182-7273 Fax: 55-11-5182-7198 Email: info@sa.metrologic.com				

Copyright

© 2002 by Metrologic Instruments, Inc. All rights reserved. No part of this work may be reproduced, transmitted, or stored in any form or by any means without prior written consent, except by reviewer, who may quote brief passages in a review, or provided for in the Copyright Act of 1976.

Products and brand names mentioned in this document are trademarks of their respective companies.

TABLE OF CONTENTS

Introduction	1
Scanner and Accessories	2
Operational Notes	3
Installation	
For RS232, OCIA and IBM 46XX Interfaces	4
For Keyboard Wedge Interface	5
For Stand Alone Keyboard Interface	6
Notes for USB Interface	7
Notes for MS/120-00 'Laser Emulation'	1
Scanner Parts	8
Audible Indicators	9
Visual Indicators	.10
Failure Modes	.11
Labels	.12
Maintenance	.12
Scan Volume Specifications	
Optimal Low Density (Default)	.13
Optimal High Density	.13
Close	.14
Normal	.14
Fdl	. 15
Optimal Low Density (Default)	16
Ontimal High Density	17
Close	.18
Normal	.19
Far	.20
Installing the Optional Wall/Counter Mount	.21
Troubleshooting Guide	.22
RS-232 Demonstration Program	.27
Applications and Protocols	.28
Design Specifications	.29
Default Settings	.31
Scanner and Cable Terminations	.36
Limited Warranty	.39
Notices	.40
Patents	.44
Index	.45
	-

INTRODUCTION

Orbit[®] is an aggressive, omnidirectional laser bar code scanner. Lightweight and rugged, Orbit is small in size, but BIG in performance. Designed for applications where counter space is limited, Orbit is the ideal presentation scanner for retail, convenience, liquor and specialty stores. In addition, Orbit's unique, contoured shape allows it to be picked-up and used as a hand-held scanner when scanning large or bulky items.

Engineered with a large, easy-to-find optimal scan area, Orbit increases the first pass read rate for maximum productivity. The scanning head can be tilted vertically a full 30° for added flexibility when scanning various sized objects. These features increase the scanning throughput without increasing the scanner size.

SCANNER	INTERFACE
7120-00	Laser Emulation, RS-232 Transmit/Receive
7120-9	OCIA and RS-232 Transmit/Receive (Full RS232 Configurable)
7120-11	IBM 46XX and Full RS-232C
7120-41	Full RS-232C/Light Pen Emulation
7120-47	Keyboard Wedge, Stand-Alone Keyboard and RS-232 Transmit/Receive
7120-62	Ruby with Verifone, RS232
7120-67	Full RS-232C (OCIA Configurable)

Orbit offers a great deal of features to the consumer:

- Fully automatic scanning operation
- PowerLink compatible
- Data editing
- 7 beeper tones
- Programmable depth of field
- Easy programming

SCANNER AND ACCESSORIES

BASIC KIT									
Part #	Description								
MS7120	Orbit [®] Presentation Laser Scanner								
00-02407B	MetroSelect [®] Programming Guide								
00-02408B	MS7120 Installation and User's Guide*								

* Available on the Metrologic website - <u>www.metrologic.com</u>

	OPTIONAL ACCESSORIES									
Part #	Description									
AC to DC Power Transformer- Regulated 5.2VDC @ 650 mA output.										
45-45593	120V United States									
45-45591	220V-240V Continental European									
45-45592	220V-240V United Kingdom									
54-54xxx	PowerLink Cable with built in power jack <i>Standard</i> - 2.1m (7') straight cord, short strain relief									
53-53xxx	PowerLink Cable with built in power jack <i>Optional</i> - 2.7m (9') coiled cord, long strain relief									
xxx specifies cc	nnection to the host.									
54-54002	Keyboard Wedge PowerLink Cable with Adapter Cable									
54-54020	Stand Alone Keyboard PowerLink Cable									

Other items may be ordered for the specific protocol being used. To order additional items, contact the dealer, distributor or call Metrologic's Customer Service Department at 1-800-ID-METRO or 1-800-436-3876.

SCANNER AND ACCESSORIES

	OPTIONAL ACCESSORIES									
Part #	Description									
MVC**	Metrologic Voltage Converter Cable +12VDC to +5.2VDC or -12VDC to +5.2VDC									
MX009-2**	MX009 USB Converter Cable									
 ** Contact a Metrologic customer service representative for additional information on the MVC and MX009 cable series and the host connections available. 										
45-45619	Counter/Wall Mount Kit									

Other items may be ordered for the specific protocol being used. To order additional items, contact the dealer, distributor or call Metrologic's Customer Service Department at 1-800-ID-METRO or 1-800-436-3876.

OPERATIONAL NOTES

Metrologic recommends using the external power supply provided with the scanner when operating the MS7120. When using power supplied by the host, the host system should supply a minimum of 250 mA of current @ 5VDC.

Orbit is shipped from the factory programmed with default settings. To configure the MS7120 scanner to meet the host system's specific needs, refer to the MetroSelect Programming Guide (MLPN 00-02407B) for instructions on how to enter the program mode and select the appropriate bar codes.

INSTALLATION FOR RS232, OCIA AND IBM 46XX INTERFACES

- 1. Turn off the host system.
- 2. Plug the male 10-pin RJ45 end of the PowerLink cable into the 10-pin jack on the MS7120.
- 3. Connect the 9 pin female end of the PowerLink cable to the host device.

Note: Skip to #6 if receiving power from the host system.

- 4. Plug the power supply's L-shaped plug into the power jack on the PowerLink cable.
- Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet should be installed near the equipment and be easily accessible. Connect AC power to the transformer.



6. Turn on the host system.

Note:

- a. When the scanner first receives power, the green LED will turn on. Then the scanner will beep once and the red LED will flash simultaneously.
- b. Plugging the scanner into the serial port of the PC does not guarantee that scanned information will appear at the PC. A software driver and correct configuration setting are also required for proper communication to occur.

Caution:

To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (<u>Safety Extra Low V</u>oltage) according to EN 60950.

To maintain compliance with standard CSA C22.2 No. 950/UL 1950 and norm EN 60950, the power source should meet applicable performance requirements for a limited power source.

INSTALLATION FOR KEYBOARD WEDGE INTERFACE

- 1. Turn off the PC/Host.
- Connect the male 10-pin RJ45 end of the PowerLink cable to the jack on the MS7120.
- 3. Connect the L-shaped plug of the power supply into the power jack on the PowerLink cable.
- Make sure the AC input requirements of the power supply matches the AC outlet. Plug the power supply into the AC outlet. The outlet should be near the equipment and easily accessible.
- Disconnect the keyboard from the PC. Note the type of connector on the keyboard and keyboard port on the PC.
- The "Y" end of the PowerLink cable terminates to female 5-pin DIN and a male 6-pin mini DIN connector. If necessary attach the supplied adapter cable to the appropriate end of the "Y" cable.



- 7. Connect one end of the "Y" cable to the Keyboard and other end of the "Y" to the Keyboard port on the PC.
- 8. Power up the PC.

Manufacturer's Recommendation:

Powering Orbit directly from the computer can sometimes cause interference with the operation of the scanner or the computer. Not all computers supply the same current through the keyboard port, explaining why a scanner will work on one computer and not another. Metrologic recommends using an external power supply. For additional information contact a Metrologic customer service representative.

Caution:



To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN 60950.

To maintain compliance with standard CSA C22.2 No. 950/UL 1950 and norm EN 60950, the power source should meet applicable performance requirements for a limited power source.

INSTALLATION FOR STAND ALONE KEYBOARD INTERFACE

- 1. Turn off the host system.
- 2. Plug the male 10-pin RJ45 end of the PowerLink cable into the 10-pin jack on the MS7120.
- 3. Connect the PowerLink cable to the keyboard port on the host system.
- 4. Plug the power supply's L-shaped plug into the power jack on the PowerLink cable.
- 5. Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet should be installed near the equipment and be easily accessible. Connect AC power to the transformer.
- 6. Turn on the host system.



Manufacturer's Recommendation:

Powering Orbit directly from the computer can sometimes cause interference with the operation of the scanner or the computer. Not all computers supply the same current through the keyboard port, explaining why a scanner will work on one computer and not another. Metrologic recommends using an external power supply. For additional information contact a Metrologic customer service representative.

Caution:



To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (<u>Safety Extra Low V</u>oltage) according to EN 60950.

To maintain compliance with standard CSA C22.2 No. 950/UL 1950 and norm EN 60950, the power source should meet applicable performance requirements for a limited power source.

INSTALLATION NOTES FOR USB INTERFACE

Metrologic's MX009 USB cable is a device that converts serial RS232 formatted data to either USB Keyboard or USB Point-of Sale communication protocol.

Please refer to the *MX009 USB Converter Cable Programming Guide* (MLPN 00-02574A) supplied with your MX009 cable for detailed installation and programming guidelines.

INSTALLATION NOTES FOR MS7120-00 LASER EMULATION

MS7120-00 Only

The MS7120-00 leaves the factory with the *Laser Emulation Mode* enabled. If you recall defaults while re-configuring your scanner the *Laser Emulation Mode* will no longer be enabled.

Scan the following barcode to re-enable the Laser Emulation interface. The scanner you are using must be labeled as an MS7120-00 to support this feature.



SCANNER PARTS





Red LED

On a successful read of a bar code, the red LED will turn ON. After communication to the host is complete, the red LED will turn OFF. Refer to Visual Indicators and Audible Indicators for additional information.



Green LED

During normal operation, the green LED is ON. This indicates that the laser is on and the unit is ready to scan. The LEDs are also used as diagnostic indicators and mode indicators. Refer to Visual Indicators and Audible Indicators for additional information.



Output Window

Laser Light emits from this aperture.



Orbit[®] Face

Tilts 30° vertically for variable positioning of the scan pattern.



Speaker



Cable Jack

10-pin modular

AUDIBLE INDICATORS

When the MS7120 scanner is in operation, it provides audible feedback. These sounds indicate the status of the scanner. Eight settings are available for the tone of the beep (normal, 6 alternate tones and no tone). To change the tone, refer to the MetroSelect[®] Programming Guide (MLPN 00-02407B) or the MetroSet2 help files.



One Beep

When the scanner *first* receives power, the green LED will turn on, then the red LED will flash and the scanner will beep once. (The red LED will remain on for the duration of the beep.) The scanner is now ready to scan.

When the scanner *successfully* reads a bar code, the red LED will flash and the scanner beeps once (if programmed to do so). If the scanner does not beep once and the red light does not flash, then the bar code has *not* been successfully read.

∭≋

Razzberry Tone

This is a failure indicator. Refer to failure modes page 11.



Three Beeps - during operation

During operation of the scanner, the red LED will flash while the scanner simultaneously beeps three times (while going into programming mode).

The red LED will continue to flash until the unit exits program mode. Upon exiting program mode, the scanner will beep three times and the red LED will stop flashing. When configured, 3 beeps can also indicate a communications timeout during normal scanning mode. When using onecode-programming, the scanner will beep three times (the current selected tone), followed by a short pause then by a high tone and a low tone. This tells the user that the single configuration bar code has successfully configured the scanner.



Three Beeps - on power up

This is a failure indicator. Refer to failure modes page 11.

VISUAL INDICATORS

There is a red LED and a green LED on the head of the MS7120. When the scanner is on, the flashing or constant illumination of the LEDs indicates the status of the current scan and the scanner.

ſ	
Ι	
Ι	
U	IJ

No Red or Green LED

The LEDs will not be illuminated if the scanner is not receiving power from the host or transformer.



Steady Green

When the laser is active, the green LED is illuminated. The green LED will remain illuminated until the laser is deactivated.

During the power save mode, the laser will turn on and off. During this period, the green LED remains illuminated.



Steady Green and Single Red Flash

When the scanner successfully reads a bar code, the red LED will flash and the scanner will beep once. If the red LED does not flash or the scanner does not beep once, then the bar code has not been successfully read.



Steady Green and Steady Red

After a successful scan, the scanner transmits the data to the host device. Some communication modes require that the host inform the scanner when data is ready to be received. If the host is not ready to accept the information, the scanner's red LED will remain on until the data can be transmitted.



Steady Green and Flashing Red

This indicates the scanner is in program mode. A razzberry tone indicates that an invalid bar code has been scanned in this mode.



Steady Red, Green off

This indicates the scanner may be waiting for communication from the host.



Flashing Green and One Razzberry Tone

This indicates the scanner has experienced a laser subsystem failure. Return the unit for repair at an authorized service center.



Flashing Red and Green and Two Razzberry Tones

This indicates the scanner has experienced a motor failure. Return the unit for repair at an authorized service center.



Continuous Razzberry Tone with both LEDs off

If, upon power up, the scanner emits a continuous razzberry tone, then the scanner has an electronic failure. Return the unit for repair at an authorized service center.



Three Beeps - on power up

If the scanner beeps 3 times on power up then, the nonvolatile memory that holds the scanner configuration has failed. Return the unit for repair at an authorized service center. Each scanner has three labels on the bottom of the unit. These labels contain information such as; the model number, date of manufacture, serial number, laser class and caution statements. The following illustrations show the location and content of the three labels.



MAINTENANCE

Smudges and dirt can interfere with the proper scanning of a bar code. Therefore, the output window will need occasional cleaning.

- 1. Spray glass cleaner onto lint free, non-abrasive cleaning cloth.
- 2. Gently wipe the scanner window.

Specifications based on 100% UPC Bar Codes.

Optimal Low Density (Default)



Optimal High Density



Specifications based on 100% UPC Bar Codes.



Close

Normal



Specifications based on 100% UPC Bar Codes.

Far



Optimal Low Density (Default)



Width of Scan Field (mm)

Minimum Bar Code Element Width											
	Α	В	С	D	Е	F	G	Н	J	Κ	
mm	.13	.15	.16	.17	.19	.23	.25	.33	.53	.66	
mils	5.2	5.7	6.3	6.8	7.5	9	10	13	21	26	

Optimal High Density



Width of Scan Field (mm)

Minimum Bar Code Element Width											
	Α	В	С	D	Е	F	G	Н	J	Κ	
mm	.13	.15	.16	.17	.19	.23	.25	.33	.53	.66	
mils	5.2	5.7	6.3	6.8	7.5	9	10	13	21	26	



Width of Scan Field (mm)

Minimum Bar Code Element Width											
	В	С	D	Ε	F	G	Н	J	Κ		
mm	.15	.16	.17	.19	.23	.25	.33	.53	.66		
mils	5.7	6.3	6.8	7.5	9	10	13	21	26		

Close



Normal

Width of Scan Field (mm)

Minimum Bar Code Element Width											
	Α	В	С	D	Е	F	G	Н	J	Κ	
mm	.13	.15	.16	.17	.19	.23	.25	.33	.53	.66	
mils	5.2	5.7	6.3	6.8	7.5	9	10	13	21	26	

0 . -25 Α ₿ 1~ 50 F С D F 75 h ł Е 副 F - 100 Distance: ÿ G **Scanner Face** Ē - 125 To Bar Code н (mm) Þ 150 Ţ 175 & K 200 225 E. 250 minini 111 Т 75 50 25 0 25 50 75

Width of Scan Field (mm)

Minimum Bar Code Element Width											
	Α	В	С	D	Е	F	G	Н	J	Κ	
mm	.13	.15	.16	.17	.19	.23	.25	.33	.53	.66	
mils	5.2	5.7	6.3	6.8	7.5	9	10	13	21	26	

Far

Kit #45-45619 contains:

1.

- a. Locking Plate [MLPN 50-50302] Qty. 1 b. Base Cover
- [MLPN 50-50301] Qty. 1 c. Wood Screw, #7 x 1.00"
- c. Wood Screw, #7 x 1.00" [MLPN 18-18013] Qty. 3
- d. Flathead Screw, M3 x 8 mm [MLPN 18-18004] Qty. 4

Use the dimensions provided in

figure 2 or the locking plate

Drill mounting holes





 Mount locking plate to wall/counter Secure the locking plate [MLPN 50-50303] to

Note the position Orbit will rest (fig. 2).

[MLPN 50-50302] as a template to drill

the counter or wall with the three #7 x 1.00" wood screws [MLPN 18-18013] provided.

3. Attach the base plate to Orbit

Secure the base cover [MLPN 50-50301] to the bottom of Orbit (fig. 4) using the four M3 x 8 mm screws [MLPN 18-18004] provided.

4. Mount Orbit to locking plate

Hold Orbit 90° clockwise from the desired position then lower it over the locking plate until it sits flush to the countertop. Twist Orbit counter clockwise 90°, as shown in figure 5, to lock unit in place.







TROUBLESHOOTING GUIDE

The following guide is for reference purposes only. Contact a Metrologic representative at 1-800-ID-METRO or 1-800-436-3876 to preserve the limited warranty terms on page 39.

All Interfaces

MS7120 Series Troubleshooting Guide								
SYMPTOMS	POSSIBLE CAUSE(S)	SOLUTION						
No LEDs, beep or motor spin	No power is being supplied to the scanner	Check transformer, outlet and power strip. Make sure the cable is plugged into the scanner						
No LEDs, beep	No power is being supplied to the scanner from host	Some host systems cannot supply enough current to power Orbit. Use the power supply included with the scanner.						
3 beeps on power up	Non-volatile RAM failure	Contact a Metrologic Representative, if the unit will not hold the programmed configuration						
Continuous razz tone on power up	RAM or ROM failure	Contact a Metrologic Representative, if the unit will not function						
Razz tone and green LED flash at power up	VLD failure	Contact a Metrologic Representative						
Razz tone and both LEDs flash at power up	Scanner motor failure	Contact a Metrologic Representative						
Unit scans, Communicates and beeps twice	Same symbol timeout set too short	Adjust same symbol timeout for a longer time						

TROUBLESHOOTING GUIDE (CONTINUED)

SYMPTOMS	POSSIBLE CAUSE(S)	SOLUTION
The unit powers up, but does not scan and/or beep	Beeper disabled. No tone selected	Enable beeper. Select tone
The unit powers up, but does not scan and/or beep	Scanning a particular symbology that is not enabled	UPC/EAN, Code 39, interleaved 2 of 5, Code 93, Code 128 and Codabar are enabled by default. Verify that the type of bar code being read has been selected
The unit powers up, but does not scan and/or beep	The scanner has been programmed for a character length lock, or a minimum length and bar code being scanned does not satisfy the programmed criteria	Verify that the bar code that is being scanned falls into the criteria. (Typical of Non- UPC/EAN codes.) (<i>The scanner</i> <i>defaults to a minimum of 4</i> <i>character bar code</i>)
The unit scans a bar code, but locks up after the first scan (red LED stays on)	The scanner is configured to support some form of host handshaking but is not receiving the signal	If the scanner is setup to support ACK/NAK, RTS/CTS, XON/XOFF or D/E, verify that the host cable and host are supporting the handshaking properly
The unit scans, but the data transmitted to the host is incorrect	The scanner's data format does not match the host system requirements	Verify that the scanner's data format matches that required by the host. Make sure that the scanner is connected to the proper host port

TROUBLESHOOTING GUIDE (CONTINUED)

SYMPTOMS	POSSIBLE CAUSE(S)	SOLUTION				
Scanner beeps at some bar codes and NOT for others of the same bar code symbology	The print quality of the bar code is suspect	Check print mode. The type of printer could be the problem. Change print settings. For example change to econo mode or high speed				
Scanner beeps at some bar codes and NOT for others of the same bar code symbology	The aspect ratio of the bar code is out of tolerance	Check print mode. The type of printer could be the problem. Change print settings. ie change to econo mode or high speed				
Scanner beeps at some bar codes and NOT for others of the same bar code symbology	The bar code may have been printed incorrectly	Check if it is a check digit/character/or border problem				
Scanner beeps at some bar codes and NOT for others of the same bar code symbology	The scanner is not configured correctly for this type of bar code	Check if check digits are set properly				
Scanner beeps at some bar codes and NOT for others of the same bar code symbology	The minimum symbol length setting does not work with the bar code	Check if the correct minimum symbol length is set				

Keyboard Wedge Only

SYMPTOMS	POSSIBLE CAUSE(S)	SOLUTION
The unit scans the bar code but there is no data	Configuration is not correct	Make sure the scanner is configured for the appropriate mode. Check internal jumper
The unit scans but the data is not correct	Configuration is not correct	Make sure that the proper PC type AT, PS2 or XT is selected. Verify correct country code and data formatting are selected. Adjust intercharacter delay SYMPTOM
The unit is transmitting each character	Configuration is not correct	Increase the interscan code delay setting. Adjust whether the F0 break is transmitted. It may be necessary to try this in both settings.
Alpha characters show as lower case	Computer is in Caps Lock mode	Enable Caps Lock detect setting of the scanner to detect whether the PC is operating in Caps Lock
Everything works except for a couple of characters	These characters may not be supported by that country's key look up table	Try operating the scanner in Alt mode

RS-232 Only

SYMPTOMS	POSSIBLE CAUSE(S)	SOLUTION
Power-up OK and scans OK but does not communicate properly to the host	Com port at the host is not working or configured properly	Check to make sure that the baud rate and parity of the scanner and the communication port match and the program is looking for "RS-232" data
Power-up OK and scans OK but does not communicate properly to the host	Cable not connected to the proper com port	Check to make sure that the baud rate and parity of the scanner and the communication port match and the program is looking for "RS-232" data
Power-up OK and scans OK but does not communicate properly to the host	Com port not operating properly	Check to make sure that the baud rate and parity of the scanner and the communication port match and the program is looking for "RS-232" data
The host is receiving data but the data does not look correct	The scanner and host may not be configured for the same interface font	Check that the scanner and the host are configured for the same interface font
Characters are being dropped	Intercharacter delay needs to be added to the transmitted output	Add some intercharacter delay to the transmitted output by using the MetroSelect [®] Programming Guide MLPN 00- 02407 or the MetroSet2 program

If an RS-232 scanner is not communicating with your IBM compatible PC, key in the following BASIC program to test that the communication port and scanner are working. This program is for demonstration purposes only. It is only intended to prove that cabling is correct, the com port is working, and the scanner is working. If the bar code data displays on the screen while using this program, it only demonstrates that the hardware interface and scanner are working. At this point, investigate whether the application software and the scanner configuration match. If the application does not support RS-232 scanners, a software wedge program that will take RS-232 data and place it into a keyboard buffer may be needed. This program tells the PC to ignore RTS-CTS, Data Set Ready (DSR) and Data Carrier Detect (DCD) signals. If the demonstration program works and yours still does not, jumper RTS to CTS and Data Terminal Reading (DTR) to DCD and DSR on the back of your PC.

10 CLS **ON ERROR GOTO 100** 20 30 OPEN "COM1:9600,S,7,1,CS0,DS0,CD0,LF" AS #1 35 PRINT "SCAN A FEW BAR CODES" 40 LINE INPUT #1. BARCODE\$ **PRINT BARCODE\$** 50 60 K\$ = INKEY\$: IF K\$ = CHR\$(27) THEN GOTO 32766 70 GOTO 40 100 PRINT "ERROR NO.": ERR: "PRESS ANY KEY TO TERMINATE." 110 K\$ = INKEY\$: IF K\$ = "" THEN GOTO 110 32766 CLOSE: SYSTEM 32767 END

APPLICATIONS AND PROTOCOLS

The model number on each scanner includes the scanner number and factory default communications protocol.

SCANNER	VERSION IDENTIFIER	COMMUNICATION PROTOCOL(S)
7120	00	Laser Emulation RS-232 Transmit/Receive
7120	9	OCIA and RS-232 Transmit/Receive (Full RS232 Configurable)
7120	11	IBM 46XX and Full RS-232C
7120	41	Full RS-232C/Light Pen Emulation
7120	47	Keyboard Wedge, Stand-Alone Keyboard and RS- 232 Transmit/Receive
7120	62	Ruby with Verifone, RS232
7120	67	Full RS-232C (OCIA Configurable)

The MS7120 Hand-Held Laser Scanner with Built-in PC Keyboard Wedge Interface is designed to be used for keyboard emulation only. Many RS-232 programmable functions available in other Metrologic scanners are also available as keyboard wedge functions.

The following are the most important selectable options specific to the keyboard wedge.

Keyboard Type

- ** AT (includes IBM® PS2 models 50, 55, 60, 80)
- XT
- IBM PS2 (includes models 30, 70, 8556)

Keyboard Country Type

- ** USA
- German
- Spanish

- Belgium
- Italian
- Spans
 Swiss

- Ita
- French
- Japan

- United Kingdom
- ** Default setting. Refer to pages 31-35 for default settings. Refer to the MetroSelect[®] Programming Guide (MLPN 00-02407B) or the MetroSet2 help files for information on how to change the default settings.

DESIGN SPECIFICATIONS

MS7120 SPECIFICATIONS

OPERATIONAL						
Light Source:	VLD 640-660 nm					
Depth of Field:	0 mm to 190 mm (0" to 7.5") at default (programmable)					
Scan Speed:	1200 scans/second					
Scan Pattern:	5 fields of 4 parallel lines (omnidirectional)					
Scan Lines:	20					
Min Bar Width:	0.13 mm (5.2 mil)					
Decode Capability:	Autodiscriminates all standard bar codes; for other symbologies call Metrologic					
System Interfaces:	PC Keyboard Wedge, RS-232, OCIA, Light Pen Emulation, IBM 46xx, Stand Alone Keyboard, Laser Emulation, USB (<i>with</i> an <i>MX009 USB converter cable</i>),					
Print Contrast:	35% minimum reflectance difference					
Number of Characters Read:	up to 80 data characters (Maximum number will vary based on symbology and density)					
Roll, Pitch, Yaw:	360°, 60°, 60°					
Beeper Operation:	7 tones or no beep					
Indicators (LED):	Green* = laser on, ready to scan * Indicator colors Red* = good read, decoding can be reversed					
MECHANICAL						
Height:	150 mm (5.9")					
Depth:	105 mm (4.1")					
Width-Orb:	80 mm (3.1")					
Width-Base:	102 mm (4.0")					
Weight:	380 grams (13.4 oz.)					
Termination:	10-pin modular RJ45					
Cable:	Standard 2.1 m (7') straight; Optional 2.7 m (9') coiled cable					
Tilt - Orb:	30° vertical					

Continued next page

DESIGN SPECIFICATIONS

MS7120 SPECIFICATIONS

ELECTRICAL	
Input Voltage:	5.2VDC ±0.25V
Power:	1.1 W
Operating Current:	220 mA (270 IBM)
DC Transformers:	Class II; 5.2VDC@ 650 mA
Laser Class:	CDRH: Class IIa; EN 60825-1:1994/A11:1996 Class 1
EMC:	FCC, ICES-003 & EN 55022 Class B
ENVIRONMENTAL	
Operating Temperature:	0°C to 40°C (32°F to 104°F)
Storage Temperature:	-40°C to 60°C (-40°F to 140°F)
Humidity:	5% to 95% relative humidity, non-condensing
Light Levels:	4840 LUX (450 foot candles)
Shock:	Designed to withstand 1 m (3.1') drops
Contaminants:	Sealed to resist airborne particulate contaminants
Ventilation:	None required

Specifications subject to change without notice.

Many functions of the scanner can be "programmed" - that is, enabled or disabled. The scanner is shipped from the factory programmed to a set of default conditions. The default parameter of the scanner has an asterisk (*) in the charts on the following pages. If an asterisk is not in the default column then the default setting is Off or Disabled. Every communication does not support every parameter. If the communication supports a parameter listed in the charts on the following pages, a check mark will appear.

PARAMETER	DEFAULT	OCIA	RS-232*	LIGHT Pen	IBM 46XX	KBW	LASER EMULATION
UPC/EAN	*	✓	✓	✓	✓	\checkmark	\checkmark
Code 128	*	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark
Code 93	*	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark
Codabar		\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	✓
Interleaved 2 of 5 (ITF)	*	✓	✓	✓	\checkmark	\checkmark	✓
MOD 10 Check on ITF		✓	✓	✓	✓	\checkmark	✓
Code 11		✓	✓	✓	✓	\checkmark	✓
Code 39	*	✓	✓	✓	✓	\checkmark	✓
Full ASCII Code 39		✓	✓	✓	✓	\checkmark	\checkmark
MOD 43 Check on Code 39		\checkmark	✓	✓	✓	\checkmark	\checkmark
MSI-Plessey		✓	✓	✓	✓	\checkmark	\checkmark
MSI-Plessey 10/10 Check Digit		✓	✓	✓	✓	✓	✓
MSI-Plessey MOD 10 Check Digit	*	~	✓	✓	~	✓	✓
Paraf Support		\checkmark	✓	\checkmark	\checkmark	\checkmark	\checkmark
ITF Symbol Lengths	Variable	\checkmark	✓	\checkmark	\checkmark	\checkmark	\checkmark
Minimum Symbol Length	4	\checkmark	✓	✓	✓	✓	~
Symbol Length Lock	None	✓	✓	\checkmark	✓	✓	✓
Bars High as Code 39	*			✓			✓
Spaces High as Code 39				✓			✓
Bars High as Scanned				\checkmark			\checkmark
Spaces High as Scanned				~			✓
DTS/SIEMENS		\checkmark					

Parameter	Default	OCIA	RS-232*	Light Pen	IBM 46XX	KBW	Laser Emulation
DTS/NIXDORF	*	\checkmark					
NCR F		\checkmark					
NCR S		\checkmark					
Poll Light Pen Source				\checkmark			
Beeper Tone	Normal	\checkmark	✓	\checkmark	✓	✓	✓
Beep/Transmit Sequence	Before Transmit	\checkmark	✓	\checkmark	\checkmark	✓	\checkmark
Communication Timeout	None	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark
Razzberry Tone on Timeout		\checkmark	~	\checkmark	\checkmark	✓	✓
Three Beeps on Timeout		\checkmark	✓	\checkmark	\checkmark	✓	✓
No Beeps on Timeout	*	\checkmark	✓	\checkmark	\checkmark	✓	✓
Enter Power Save Mode	10 mins.	\checkmark	✓	\checkmark	\checkmark	✓	✓
Same Symbol Rescan Timeout: 200 msecs		\checkmark	~	\checkmark	\checkmark	✓	✓
Same Symbol Rescan Timeout: 500 msecs Programmable in 50 msec steps (MAX 6.35 seconds)	*	✓	~	~	✓	~	✓
Same Symbol Rescan Timeout: 1250 msecs		\checkmark	~	\checkmark	\checkmark	\checkmark	~
Same Symbol Rescan Timeout: 2000 msecs		✓	~	✓	✓	~	~
Intercharacter Delay Programmable in 1 msec steps (MAX 255 msecs)	1 msecs 10msecs in KBW	✓	~		✓	~	
Number of Scan Buffers	1	\checkmark	✓	\checkmark	✓	✓	✓
Transmit UPC-A Check Digit	*	\checkmark	~	~	~	✓	✓
Transmit UPC-E Check Digit			~	~	~	✓	✓
Expand UPC-E		\checkmark	✓	\checkmark	✓	✓	✓
Convert UPC-A to EAN-13		>	~		\checkmark	✓	
Transmit Lead Zero on UPC-E		\checkmark	~	\checkmark	\checkmark	✓	✓

Parameter	Default	OCIA	RS-232*	Light Pen	IBM 46XX	KBW	Laser Emulation
Convert EAN-8 to EAN-13		\checkmark	\checkmark		\checkmark	✓	
Transmit UPC-A Number System	*	~	~	~	~	✓	✓
Transmit UPC-A Manufacturer ID#	*	~	✓	~	~	✓	✓
Transmit UPC-A Item ID#	*	\checkmark	✓	\checkmark	\checkmark	✓	✓
Transmit Codabar Start/Stop Characters		~	~		~	✓	
CLSI Editing (Enable)		✓	\checkmark		\checkmark	\checkmark	
Transmit Mod 43 Check Digit on Code 39		~	~		~	~	
Transmit Code 39 Stop/Start Characters		~	~		~	~	
Transmit Mod 10/ITF		~	~		\checkmark	✓	
Transmit MSI-Plessey Check Characters		~	✓		~	✓	
Parity	Space		~				
Baud Rate	9600		\checkmark				
8 Data Bits			✓				
7 Data Bits	*		✓				
Transmit Sanyo ID Characters			✓			✓	
Nixdorf ID			✓			✓	
LRC Enabled			✓			✓	
UPC Prefix			✓			\checkmark	
UPC Suffix			✓			✓	
Transmit AIM ID Characters			✓			✓	
STX Prefix			\checkmark			\checkmark	
ETX Suffix			\checkmark			\checkmark	

Parameter	Default	OCIA	RS-232*	Light Pen	IBM 46XX	KBW	Laser Emulation
Carriage Return	*		✓			✓	
Line Feed - disabled by default in KBW	*		✓			✓	
Tab Prefix			✓			✓	
Tab Suffix			✓			\checkmark	
"DE" Disable Command			✓				
"FL" Laser Enable Command			✓				
DTR Handshaking Support			✓				
RTS/CTS Handshaking			✓				
Character RTS/CTS	*		~				
Message RTS/CTS			✓				
XON/XOFF Handshaking			✓				
ACK/NAK			✓				
Two Digit Supplements		~	✓	as code 39	✓	~	as code 39
Five Digit Supplements		~	~	as code 39	✓	~	as code 39
Bookland		~	~	as code 39	~	~	as code 39
977 (2 digit) Supplemental Requirement		~	~	✓	~	~	✓
Supplements are not Required	*	~	✓	\checkmark	~	✓	✓
Two Digit Redundancy	*	~	✓	~	>	✓	\checkmark
Five Digit Redundancy		~	~	\checkmark	~	✓	✓
100 msec to Find Supplement Programmable in 100msec steps (MAX 800 msec)	*	~	~	✓	√	~	~

Parameter	Default	OCIA	RS-232*	Light Pen	IBM 46XX	KBW	Laser Emulation
Coupon Code 128		✓	~	as code 39	✓	~	as code 39
Programmable Code Lengths	7 avail.	~	~	~	~	~	~
Programmable Prefix Characters	10 avail.		~				
Suffix Characters			~				
Prefixes for individual Code Types							
Editing		✓	~	✓	~	~	✓
Inter Scan-Code Delay Programmable (100 msec steps)	800 msec					~	
Function/Control Key Support							
Minimum Element Width Programmable in 5.6 μsec steps	1 msec			~			✓
Depth of Field							
Variable Depth of Field	*	✓	~	~	✓	~	~
Normal Depth of Field	*	✓	~	~	✓	~	~
Extended Depth of Field		\checkmark	~	~	~	~	✓
Long Depth of Field		✓	✓	\checkmark	\checkmark	✓	~
Ultra Close Depth of Field		\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	~

Scanner Pinout Connections

The MS7120 scanner interfaces terminate to a 10-pin modular jack. The serial # label indicates the interface enabled when the scanner is shipped from the factory. Some units have internal jumpers that can be moved to enable a different electrical interface. Current combinations are listed below.



_			
MS7120-9 OCIA JP1 = Open and JP2 = Closed		MS7120-67 RS-232/LTPN JP1 = Closed and JP2 = Open	
	Pin	Function	Function
Γ	1	Ground	Ground
ſ	2	RS-232 Transmit Output	RS-232 Transmit Output
ľ	3	RS-232 Receive Input	RS-232 Receive Input
ľ	4	RDATA	RTS Output
ľ	5	RDATA Return	CTS Input
ľ	6	Clock in	DTR Input/LTPN Source
ľ	7	Clock out	Reserved
	8	Clock in Return/Clock out Rtrn	LTPN Data
[9	+5VDC	+5VDC
ľ	10	Shield Ground	Shield Ground

MS7120-47 Keyboard Wedge JP1 = Open and JP2 = Closed		
Pin	Function	
1	Ground	
2	RS-232 Transmit Output	
3	RS-232 Receive Input	
4	PC Data	
5	PC Clock	
6	KB Clock	
7	PC +5V	
8	KB Data	
9	+5VDC	
10	Shield Ground	

MS7120-41 RS-232/LTPN

JP1 = Closed and JP2 = Open

Function
Ground
RS-232 Transmit Output
RS-232 Receive Input
RTS Output
CTS Input
DTR Input/LTPN Source
Reserved
LTPN Data
+5VDC
Shield Ground

Continued next page

Options listed are program/cable selections

SCANNER AND CABLE TERMINATIONS

MS7120-11 IBM 46XX/RS-232		
Pin	Function	
1	Ground	
2	RS-232 Transmit Output	
3	RS-232 Receive Input	
4	RTS Output	
5	CTS Input	
6	DTR Input	
7	IBM 46XX transmit	
8	IBM 46XX Receive	
9	+5VDC	
10	Shield Ground	



Options listed are program/cable selections

Cable Connector configurations

PowerLink Cable MLPN 54-54xxx* or 53-53xxx*		
Pin	Function	
1	Shield Ground	
2	RS-232 Transmit Output	
3	RS-232 Receive Input	
4	DTR Input	
5	Power/Signal Ground	
6	Reserved	
7	CTS Input	
8	RTS Output	
9	+5VDC	



9-Pin D-Type Connector

xxx* specifies connection to the host.

Stand Alone Keyboard Cable MLPN 54-54020		
Pin	Function	
1	PC Data	
2	NC	
3	Power Ground	
4	+5VDC PC Power to KB	
5	PC Clock	
6	NC	



6-Pin Male Mini-DIN Conn.

Cable Connector Configuration

The PowerLink cable is terminated with a 5-pin DIN female connector on one end, and a 6-pin mini DIN male on the other.

PowerLink Cable





5-Pin DIN, Female 6-Pin DIN, Male

Metrologic will supply an adapter cable with a 5-pin DIN male connector on one end and a 6-pin mini DIN female connector on the other.







5-Pin Din, Male

Adapter Cable

6-pin Mini Din, Female

According to the termination required, connect the appropriate end of the adapter cable to the PowerLink cable, leaving the necessary termination exposed for connecting to the keyboard and the keyboard port on the PC. The pin assignments are as follows:

PowerLink Cable

5-pin Female DIN			
Pin	Function		
1	Keyboard Clock		
2	Keyboard Data		
3	No Connect		
4	Power Ground		
5	+5 Volts DC		
6	DID MOLO MUDI DIN		
Pin	Function		
Pin 1	Function Keyboard Data		
Pin 1 2	Function Keyboard Data No Connect		
Pin 1 2 3	Function Keyboard Data No Connect Power Ground		
Pin 1 2 3 4	Function Function Keyboard Data No Connect Power Ground +5 Volts DC		
Pin 1 2 3 4 5	Function Function Keyboard Data No Connect Power Ground +5 Volts DC PC Clock		

Adapter Cable

	5-pin Male DIN
Pin	Function
1	PC Clock
2	PC Data
3	No Connect
4	Power Ground
5	+5 Volts DC
6-	pin Female Mini-DIN
Pin	Function
1	Keyboard Data
2	No Connect
3	Power Ground
4	+5 Volts DC
5	Keyboard Clock
6	No Connect

LIMITED WARRANTY

The MS7120 Orbit[®] scanners are manufactured by Metrologic at its Blackwood, New Jersey, U.S.A. facility. The MS7120 scanners have a two (2) year limited warranty from the date of manufacture. Metrologic warrants and represents that all MS7120 scanners are free of all defects in material, workmanship and design, and have been produced and labeled in compliance with all applicable U.S. Federal, state and local laws, regulations and ordinances pertaining to their production and labeling.

This warranty is limited to repair, replacement of Product or refund of Product price at the sole discretion of Metrologic. Faulty equipment must be returned to the Metrologic facility in Blackwood, New Jersey, U.S.A. or Puchheim, Germany. To do this, contact Metrologic's Customer Service/Repair Department to obtain a Returned Material Authorization (RMA) number.

In the event that it is determined the equipment failure is covered under this warranty, Metrologic shall, at its sole option, repair the Product or replace the Product with a functionally equivalent unit and return such repaired or replaced Product without charge for service or return freight, whether distributor, dealer/reseller, or retail consumer, or refund an amount equal to the original purchase price.

This limited warranty does not extend to any Product which, in the sole judgement of Metrologic, has been subjected to abuse, misuse, neglect, improper installation, or accident, nor any damage due to use or misuse produced from integration of the Product into any mechanical, electrical or computer system. The warranty is void if the case of Product is opened by anyone other than Metrologic's repair department or authorized repair centers.

THIS LIMITED WARRANTY, EXCEPT AS TO TITLE, IS IN LIEU OF ALL OTHER WARRANTIES OR GUARANTEES, EITHER EXPRESS OR IMPLIED, AND SPECIFICALLY EXCLUDES, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE UNDER THE UNIFORM COMMERCIAL CODE, OR ARISING OUT OF CUSTOM OR CONDUCT. THE RIGHTS AND REMEDIES PROVIDED HEREIN ARE EXCLUSIVE AND IN LIEU OF ANY OTHER RIGHTS OR REMEDIES. IN NO EVENT SHALL METROLOGIC BE LIABLE FOR ANY INDIRECT OR CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES TO PERSON OR PROPERTY, OR EFFECT ON BUSINESS OR PROPERTY, OR OTHER DAMAGES OR EXPENSES DUE DIRECTLY OR INDIRECTLY TO THE PRODUCT, EXCEPT AS STATED IN THIS WARRANTY. IN NO EVENT SHALL ANY LIABILITY OF METROLOGIC EXCEED THE ACTUAL AMOUNT PAID TO METROLOGIC FOR THE PRODUCT. METROLOGIC RESERVES THE RIGHT TO MAKE ANY CHANGES TO THE PRODUCT DESCRIBED HEREIN.

USA Corporate Headquarters Metrologic Instruments, Inc.

90 Coles Road Blackwood, NJ 08012-4683 Customer Service Department: 1-800-ID-METRO (1-800-436-3876) TEL: 856-228-8100 FAX: 856-228-6673

Germany

Metrologic Instruments GmbH Dornierstrasse 2 82178 Puchheim b Munich, Germany TEL: 49-89-89019-0 FAX: 49-89-89019-200

NOTICES

Notices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice

This Class B digital apparatus complies with Canadian ICES-003.

Remarque

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

≜Caution

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser light exposure. Under no circumstances should the customer attempt to service the laser scanner. Never attempt to look at the laser beam, even if the scanner appears to be nonfunctional. Never open the scanner in an attempt to look into the device. Doing so could result in hazardous laser light exposure. The use of optical instruments with the laser equipment will increase eye hazard.

Atención 🛆

La modificación de los procedimientos, o la utilización de controles o ajustes distintos de los especificados aquí, pueden provocar una luz de láser peligrosa. Bajo ninguna circunstancia el usuario deberá realizar el mantenimiento del láser del escáner. Ni intentar mirar al haz del láser incluso cuando este no esté operativo. Tampoco deberá abrir el escáner para examinar el aparato. El hacerlo puede conllevar una exposición peligrosa a la luz de láser. El uso de instrumentos ópticos con el equipo láser puede incrementar el riesgo para la vista.

Attention

L'emploi de commandes, réglages ou procédés autres que ceux décrits ici peut entraîner de graves irradiations. Le client ne doit en aucun cas essayer d'entretenir lui-même le scanner ou le laser. Ne regardez jamais directement le rayon laser, même si vous croyez que le scanner est inactif. N'ouvrez jamais le scanner pour regarder dans l'appareil. Ce faisant, vous vous exposez à une rayonnement laser qú êst hazardous. L'emploi d'appareils optiques avec cet équipement laser augmente le risque d'endommagement de la vision.

NOTICES

▲ Achtung

Die Verwendung anderer als der hier beschriebenen Steuerungen, Einstellungen oder Verfahren kann eine gefährliche Laserstrahlung hervorrufen. Der Kunde sollte unter keinen Umständen versuchen, den Laser-Scanner selbst zu warten. Sehen Sie niemals in den Laserstrahl, selbst wenn Sie glauben, daß der Scanner nicht aktiv ist. Öffnen Sie niemals den Scanner, um in das Gerät hineinzusehen. Wenn Sie dies tun, können Sie sich einer gefährlichen Laserstrahlung aussetzen. Der Einsatz optischer Geräte mit dieser Laserausrüstung erhöht das Risiko einer Sehschädigung.

Attenzione

L'utilizzo di sistemi di controllo, di regolazioni o di procedimenti diversi da quelli descritti nel presente Manuale può provocare delle esposizioni a raggi laser rischiose. Il cliente non deve assolutamente tentare di riparare egli stesso lo scanner laser. Non guardate mai il raggio laser, anche se credete che lo scanner non sia attivo. Non aprite mai lo scanner per guardare dentro l'apparecchio. Facendolo potete esporVi ad una esposizione laser rischiosa. L'uso di apparecchi ottici, equipaggiati con raggi laser, aumenta il rischio di danni alla vista.

The following notice applies to Model number MS7120-11 only.

For Class B compliance with FCC Part 15, ICES-003, and EN55022, attach the provided ferrite choke to the PowerLink cable shipped with your MS7120-11 bar code scanner.

Ferrite Choke Installation:

- 1. Remove the provided ferrite choke from the protective envelope.
- 2. To open the ferrite, insert a small slotted screwdriver into the rectangular opening and pry the choke open.
- Place the cable into the slot of one of the choke's two halves. Position the ferrite choke near the end of the data/power cable (*refer figure 1*).
- 4. Fold the two halves of the choke enclosure together until they snap into the closed position.



Figure 1

Die nachfolgende Mitteilung gilt nur für Modell Nr. MS7120-11

Zur Klassifizierung gemäß Klasse B nach FCC Teil 15, ICES-003 und EN55022, befestigen Sie den vorliegenden Ferritkern an dem mitgelieferte PowerLink Kabel Ihres MS7120-11 Barcode Scanners.

Ferritkern Installation:

- 1. Entfernen Sie den vorliegenden Ferritkern aus der Schutzhülle.
- Um den Ferritkern zu öffnen, führen Sie einen kleinen Schlitzschraubendreher in die rechteckige Öffnung und stemmen Sie den Ferritkern auf.
- Stecken Sie das Kabel in eine der beiden Hälften des Ferritkern. Legen Sie den Ferritkern an das Ende des Daten-/Stromkabels (s. Bild 1).
- Klappen Sie die beiden Hälften des Ferritkern Ver-schlusses zusammen.



Bild 1

Le seguenti informazioni sono valide solo per il modello MS7120-11

Per essere conformi alla Classe B delle norme FCC Parte 15, ICES-003, e EN55022, occorre attaccare, al cavo dati/alimentazione inviato con l'MS7120-11, il nucleo di Ferrite allegato.

Installazione del nucleo di ferrite:

- 1. Rimuovere il nucleo dalla busta protettiva.
- 2. Per aprire il nucleo inserire un piccolo cacciavite nella fessura presente e fare leva.
- Posizionare il cavo nell'incavo di una delle due parti del nucleo di ferrite. Posizionare il nucleo vicino alla fine del cavo dati/alimentazione (figura 1)
- Richiudere le due parti del nucleo di ferrite e fare pressione fino a che non aderiscono perfettamente.



Figura 1

Nota (exclusivamente para los modelos de la serie MS7120-11)

De acuerdo con las normativas FCC apartado 15, ICES-003 y EN55022 para la Clase B, el obturador de ferrita del PowerLink que se suministra con el modelo de lector de códigos de barras MS7120-11.

Instalación del obturador de ferrita

- 1. Quitar el envoltorio protector del obturador de ferrita
- Para abrir el obturador, introduzca un destornillador plano pequeño dentro de la abertura rectangular y deje el obturador abierto
- Ponga el cable dentro de una de las dos mitades del obturador. Sitúe el obturador de ferrita cerca del fin del cable de alimentación (tal y como aparece en el esquema)
- Junte de nuevo las dos mitades del obturador y apriete hasta que suene el clip para cerrarlo



"Patent Information

This METROLOGIC product may be covered by one or more of the following U.S. Patents:

U.S. Patent No.; 4,960,985; 5,081,342; 5,216,232; 5,260,553; 5,340,971; 5,424,525; 5,484,992; 5,525,789; 5,528,024; 5,557,093; 5,616,908; 5,627,359; 5,637,852; 5,661,292; 5,777,315; 5,789,730; 5,789,731; 5,811,780; 5,828,048; 5,844,227; 5,925,870; 6,029,894; 6,098,885; 6,209,789; 6,257,492; 6,286,760; 6,299,067; D408,806; 4,360,798; 4,369,361; 4,387,297; 4,460,120; 4,496,831; 4,593,186; 4,607,156; 4,673,805; 4,736,095; 4,758,717; 4,816,660; 4,845,350; 4,896,026; 4,923,281; 4,933,538; 4,992,717; 5,081,342; 5,015,833; 5,017,765; 5,059,779; 5,117,098; 5,124,539; 5,130,520; 5,132,525; 5,140,144; 5,149,950; 5,180,904; 5,200,599; 5,229,591; 5,247,162; 5,250,790; 5,250,791; 5,250,792; 5,260,553; 5,262,628; 5,280,162; 5,280,164; 5,304,788; 5,321,246; 5,324,924; 5,340,973; 5,396,053; 5.396.055: 5.408.081: 5.410.139: 5.424.525: 5.436.440: 5.449.891: 5,468,949; 5,468,951; 5,479,000; 5,484,992; 5,525,789; 5,528,024; 5,532,469; 5,545,889; 5,591,953; 5,616,908; 5,627,359

No license right or sublicense is granted, either expressly or by implication, estoppel, or otherwise, under any METROLOGIC or third party intellectual property rights (whether or not such third party rights are licensed to METROLOGIC), including any third party patent listed above, except for an implied license only for the normal intended use of the specific equipment, circuits, and devices represented by or contained in the METROLOGIC products that are physically transferred to the user, and only to the extent of METROLOGIC'S license rights and subject to any conditions, covenants and restrictions therein."

Other worldwide patents pending.

Α

accessories	
adapter	2, 3, 5, 38
application	
audible	9
authorized service	e center 11
autodiscriminates	29

В

bar code	.1, 3,	8-10,	12-2	20,
23-25, 27, 1	29, 4 ⁻	1		
beep 4, 9,	10, 2	2, 23,	29,	32

С

cable	2-6, 22, 23, 26, 29,
36-38, 41,	43
caution	4, 5, 6, 40
CDRH	
CE	
communicatio	n 4, 8, 10,
26-28, 31,	32
compliance	. 4, 5, 6, 39, 40, 41
connector	2, 3, 5, 37, 38
current3	, 5, 6, 9, 10, 22, 36
customer serv	riceii, 3, 5, 6, 39

D

DC transformer	30
decode capability	29
default settings3, 28,	31-35
depth of field	1
design specifications2	29, 30
dimensions	21

Ε

electrical	30,	36,	39
extended depth of field	d		35
external power supply		3, 5	5, 6

F

failure indicato	r					9
failure modes.				9,	1	1
function	22,	35,	36,	37,	3	8

G

green LED			10
ground	36	, 37,	38

Η

host...... 2-6, 8, 10, 22, 23, 26

I

indicators	8, 9,	10,	29
input voltage			30
interfaces	4,	22,	36

Κ

keyboard type				. 28
keyboard wedge	2,	3,	5,	25,
28, 29, 36				

L

labels	· · · · · · · · · · · · · · · · · · ·	12
LED	4, 8, 9, 10, 22, 2	29
light levels	S	30
light pen	1, 2, 3, 28, 29, 31-	35
light sourc	;e ;	29

Μ

maintenance	12
mechanical 29,	39
min bar width	29

Ν

normal	depth of field	. 35
notices		, 43

0

OCIA1-4, 28, 29,	31-36
omnidirectional	. 1, 29
operating current	30
operating temperature	30
operation 1, 5, 6, 8, 9, 2	29, 40
operational	. 3, 29
output window	12

Ρ

parts2, 3, 8	3
patents 44	1
PC4, 5, 25, 27-29, 36, 38	3
pin assignments38	3
port 4, 5, 6, 23, 26, 27, 38	3
power supply 4, 5, 6, 22	2
programming guide2, 3, 9	,
26, 28	
property 44	1
protocols28	3

R

razzberry tone 9, 10, 1	1, 32
RDATA	36
recommendation	5, 6
red LED 4, 8, 9, 1	0, 23
repair1	1, 39
RMA	39
RS-2321, 2, 3, 26-29, 3	31-37

S

scan lines	29
scan pattern	8, 29
scan speed	29
scanner installation	4, 5, 6
SELV	4, 5, 6
shock	30
specifications 13-	15, 29, 30
stand	2, 3, 6, 29
storage	30
system interfaces	29

Т

termination	
test	
tones	1, 9, 29
troubleshooting	22-26

V

ventilation	30
visual	10
voltage	4, 5, 6

W

warranty	22,	39
weight		29
window		12

